



EASY AS 1-2-3

1 SMALL HOSE CLAMP

1 TUB

1 EQUIPMENT PAK

2 LARGE HOSE CLAMPS

1 TUB COVER

4 PACK OF JET UNITS (IN T220 TUB)

5 PACK OF JET UNITS (IN T300 TUB)

2 STRAPS

1 HOSE COVER WITH VINYL


1 OWNERS MANUAL PACKAGE

1.

- A) LAY STRAPS IN AN "X" ON A LEVEL SURFACE
- B) CENTER TUB ON "X"
- C) PLACE TUB COVER ON THE TUB AND ADJUST STRAPS
- D) PLACE EQUIPMENT PAK NEXT TO TUB UNIONS. MAKE SURE TUB OUTLET IS BETWEEN 5'-15' FROM THE TUB

NOTE:


IF YOUR FILTER IS NOT CONNECTED TO THE TUB FITTING, PLEASE REFER TO YOUR MANUAL.

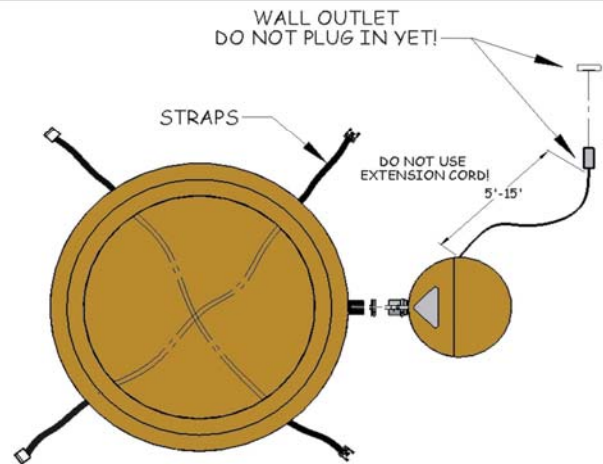

2.

- A) PLACE CLAMPS OVER CONNECTING HOSE
- B) SLIDE CONNECTING HOSE OVER TUB CONNECTORS
- C) TIGHTEN CLAMPS. DO NOT OVER TIGHTEN CLAMPS. YOU CAN ALWAYS TIGHTEN MORE IF THEY LEAK
- D) TURN ON HOSE AND ALLOW WATER TO RUN FOR 3-5 MINUTES TO CLEAR HOSE (BAD THINGS GROW IN HOSES!)

DO NOT PLUG IN YET!

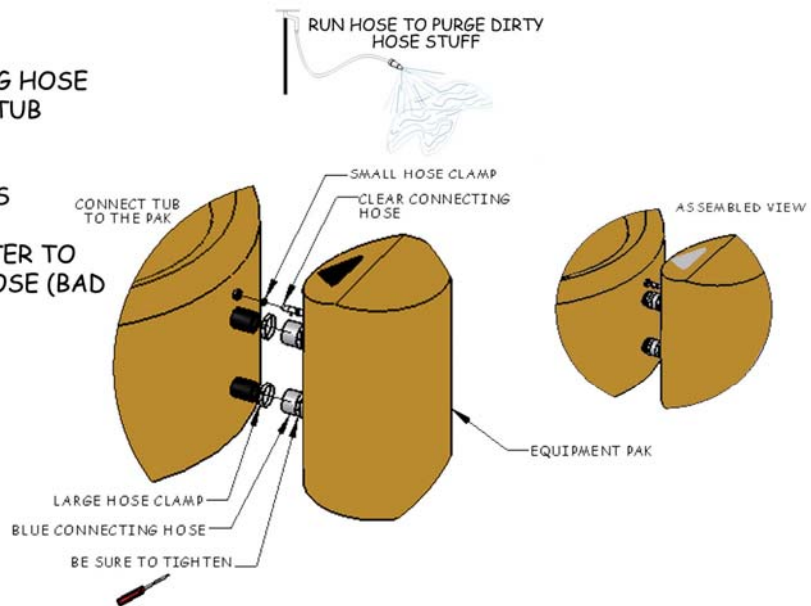

3.

- A) REMOVE THE JET UNITS FROM THE PLASTIC BAG AND SIMPLY SNAP THEM IN THE TUB WALL
- B) SMOOTH OUT WRINKLES ON BOTTOM
- C) CONTINUE TO FILL TUB UNTIL WATER IS 2 INCHES ABOVE THE HIGHEST JET
- D) CHECK HOSE CONNECTIONS FOR LEAKS
- E) PLUG IT IN. IT WILL TURN ON AUTOMATICALLY.
- F) RE-CHECK FOR LEAKS AND TIGHTEN ACCORDINGLY
- G) INSTALL FOAM HOSE COVER WITH VINYL
- H) SET TUB TO DESIRED TEMPERATURE
- I) ADD 1 TABLESPOON OF CHLORINE

